



'Piranha Off Road products are not associated in any way with FORD Motor Co of Aust Ltd or any of its related companies'

To Suit F250 / BRONCO 6 CYL / V8 PETROL / DIESEL

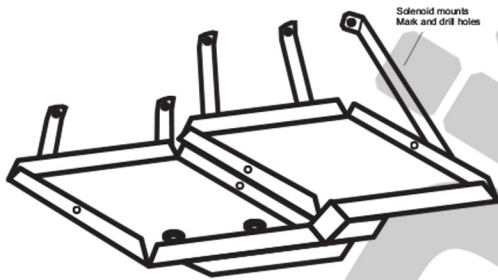

PART NUMBER
BTF250
APPROX FITTING TIME
2 Hours
MAX BATTERY SIZE
300mm Long
RECOMMENDED TYPE
Cycle Duty
TRAY LOCATION
DSFT



PARTS INCLUDED WITH TRAY

- 3 X M6 Bolts
- 2 X M6 Nut
- 2 X M6 Weld Bolt
- 2 X M8 Bolt Short
- 2 X M8 Bolt Countersunk
- 1 X M8 Nut
- 2 X J Bolts
- 1 X Special Top Mount

RECOMMENDED ISOLATOR

DBE140SF
or
DBE180-SX

FITTING INSTRUCTIONS

The cradle fits drivers front.

Take out single factory fitted tray and fit double. Fits V8 petrol, V8 Diesel, 6 cyl turbo diesel all models.
Move fuse block to between loom/air intake pipe.
Relocate solenoid to largest arm of tray.
Lugs one side of original battery cut off very carefully. main goes to rear, aux to front.

Ensure, Before closing the bonnet that all items fitted have adequate clearance