


FITTING RECOMMENDATIONS

Mud & Snow Chains

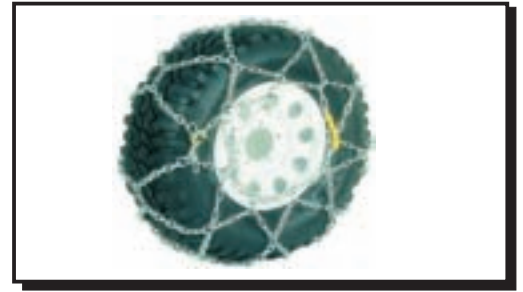

PLEASE NOTE

Piranha Off Road Products will not be held liable for any consequential damage whilst these chains are fitted.

WARNING

Please read the following warnings, as they are for your safety.

- A maximum speed of 40 KPH whilst chains are fitted.
- We suggest fitting to **REAR** wheels for off road use.
- We suggest fitting to **FRONT** wheels for road us.
If clearance permits, check with your vehicles manufacturer.
If clearance is an issue fit to rear wheels.
- Pull car up in a safe, secure, flat area before attempting to fit chains.
- Travel about 100m, pull over, again in a safe place, recheck the tension of chains and readjust as required.

There are many different ways to fit chains, however we find the two easiest are as follows:

OPTION 1

1. Drive over a small block of wood, lifting the wheel off the ground.
2. Place the chain over the tyre.
3. Hook up the back of the chain, and then hook up the front of the chain.
4. Tension the chain to fit tyre/wheel.
5. Repeat steps 1 - 5 for the other side.
6. Drive for 100m check tension, readjust as required, and proceed safely.

OPTION 2

1. Line up chains with wheels and lay chains flat out on road.
2. Either drive or reverse over chains.
3. Lift up each end of chain and lay over tyre/wheel.
4. Hook up the back of the chain, and then hook up the front of the chain.
5. Tension the chain to fit tyre/wheel.
6. Repeat steps 3 - 5 for the other side.
7. Drive for 100m, check tension, readjust as required, and proceed safely.



piranha
OFF ROAD PRODUCTS

Piranha Off Road Products
Factory 4, 383 Dorset Road
Boronia VIC 3155
Fh: (03) 9762 1200
Fx: (03) 9762 1400
www.piranhaoffroad.com.au

Piranha use & recommend:



FITTING RECOMMENDATIONS

These photo's illustrates step by step sequence of fitting chains.

